

VERTICAL INSTALLATION INSTRUCTIONS

For Vehicle Bracket PN 81-674
(use with Model Number SELF-SERVICE 0930003)

IMPORTANT: Only the mounting orientations shown in Fig. A and Fig. B are approved for end use.

Mounting the Vehicle Bracket

1. Determine the desired installation height for the extinguisher and a sturdy surface for mounting.
2. Hold the vehicle bracket vertically against the surface with the quick-release strap towards the top (Fig. A). Ensure the bottom plate is level.
3. Mark the center of the top two and bottom two holes and set the bracket aside.
4. Pre-drill the holes marked in step 3 with a 3/32" bit. Secure the vehicle bracket to the surface using the four long screws provided.

Installing the Fire Extinguisher in the Vehicle Bracket

1. Unlatch the quick-release strap on the vehicle bracket by pulling the yellow latch lever to the left.
2. Insert the extinguisher upright into the unlatched strap so the strap goes through the extinguisher handles and wraps around the lower portion of the discharge head. Set the extinguisher on the bottom plate of the bracket, ensuring its bottom rim is between the rim tab and the back of the bracket. Rotate the extinguisher so the instruction label is facing out.
3. Fasten the quick-release strap. Connect the latch loop to the latch hook and flip the latch lever to the right. This will lock the quick-release strap securely around the discharge head.

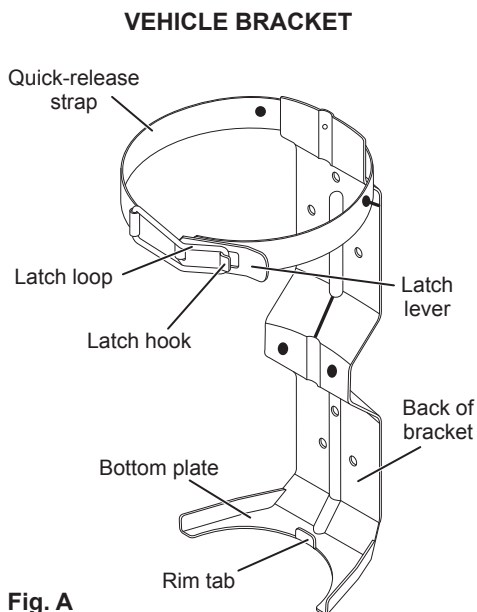


Fig. A

HORIZONTAL INSTALLATION INSTRUCTIONS

For Vehicle Bracket PN 81-674
(use with Model Number SELF-SERVICE 0930003)

IMPORTANT: Only the mounting orientations shown in Fig. A and Fig. B are approved for end use.

Mounting the Vehicle Bracket

1. Locate a sturdy surface to mount the fire extinguisher vehicle bracket so the latch faces up.
2. Place the vehicle bracket on the surface so the quick-release strap is on the right (Fig. B). Ensure there is clearance on all sides for the fire extinguisher when installed.
3. Mark the center of the left two and right two holes and set the bracket aside.
4. Pre-drill the holes marked in step 3 with a 3/32" bit. Secure the vehicle bracket to the surface using the four long screws provided.

Installing the Fire Extinguisher in the Vehicle Bracket

1. Unlatch the quick-release strap on the vehicle bracket by flipping the yellow latch lever up.
2. Insert the extinguisher into the unlatched strap so the label is facing up and the strap goes through the extinguisher handle and wraps around the lower portion of the discharge head. Ensure the bottom rim of the extinguisher is between the bracket rim tab and the back of the bracket.
3. Fasten the quick-release strap. Connect the latch loop to the latch hook and flip the latch lever down. This will lock the quick-release strap securely around the discharge head.

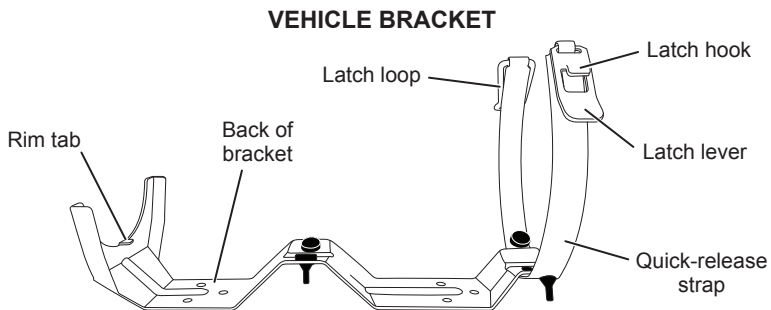


Fig. B